

from anywhere in p1 - p5	from Off	button press types	in "adjust"
Press 0.3 - 0.75 sec	—	most recent	select adjustment
Click 2x click <0.3 sec twice		p2ml	p2ml
Click 3x		p3ml	p3ml
Click 4x or 5x		p4ml or p5ml	p4ml or p5ml
Click 6x		p1ml	p1ml
Long press 0.75 - 1.5 sec	●	battery charge level	select
Hold 1.5 - 3.5 sec	●	battery charge level	select & turn off
Hold to save 6 sec	●	n/a	select & save

## flowlight :: full spectrum

flowlight®-FS :: born of a passion  
for beauty and movement,  
engineered to illuminate your life.

Modular & versatile, flowlights  
fit in all flowtoys tubes & crystal cases  
enabling you to create poi, staffs,  
martial arts props and more with just  
2-4 lights and a few modular parts.

Flowlights also make unique  
fashion accessories & safety lights.



durable • rechargeable • lifetime warranty

## flowlight :: full spectrum

30+ modes  
all adjustable • all beautiful

programmable  
adjust & save up to 10 favorites



kinetic awareness  
motion response



smart power  
low battery &  
charge level indicators

rechargeable  
runs on 1 AAA

revolutionary LED glowstick

simple — superbright  
1-button interface — multicolor LEDs

## accelerometer response mode

### Pulse :: Page 1 mode 10

Responds to your movement, indicating stalls, bumps  
or wraps!

### autoplay

### Display all modes in a Page


- Mode11 in Pages 1-4 displays every mode on that page in sequence.
- Default timing interval between modes is ~5 seconds.
- You can adjust the timing interval with a long press. There are 5 different intervals to choose from, indicated by the number of blinks in "adjust".  
Levels 1 - 5 :: ~0.25, 1, 5, 15, 30 seconds
- P5m4 is a bonus mode that automatically cycles through all 30 modes with randomized adjustments. Perfect for the ultimate variety.

### power


**Check your battery charge level:** From off, **hold** button. The light will blink its charge level color:  
Red: low || Orange: ok || Yellow: good || Green: great

**Low battery mode:** When the battery gets low, the light will exhibit a dim red flicker for awhile, so your light doesn't go totally dark immediately.


### page 1 :: play

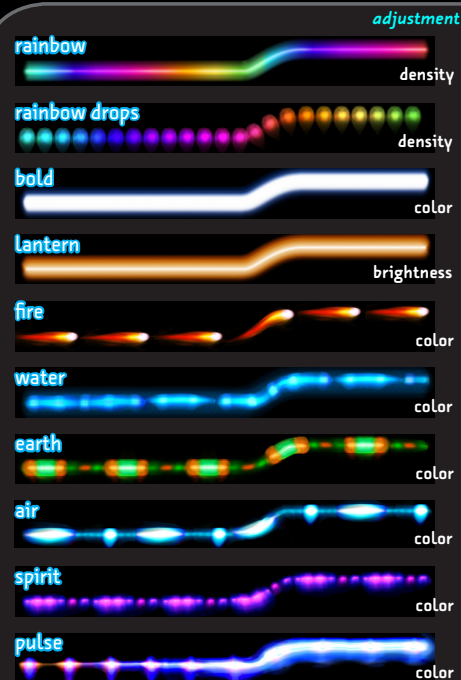

### page 2 :: party :: click button 2x

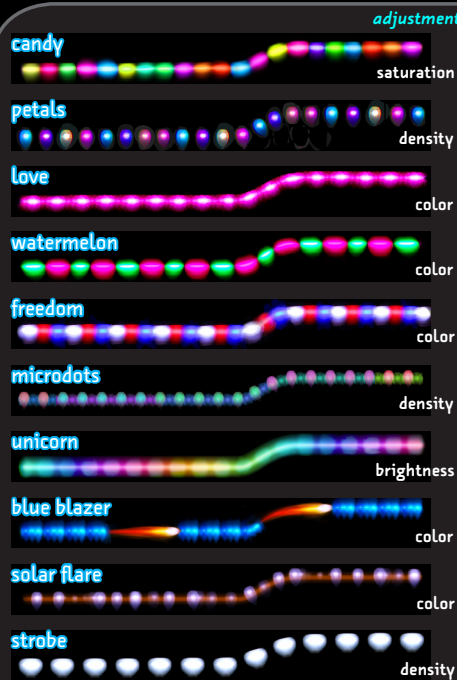

### page 3 :: perform :: click button 3x

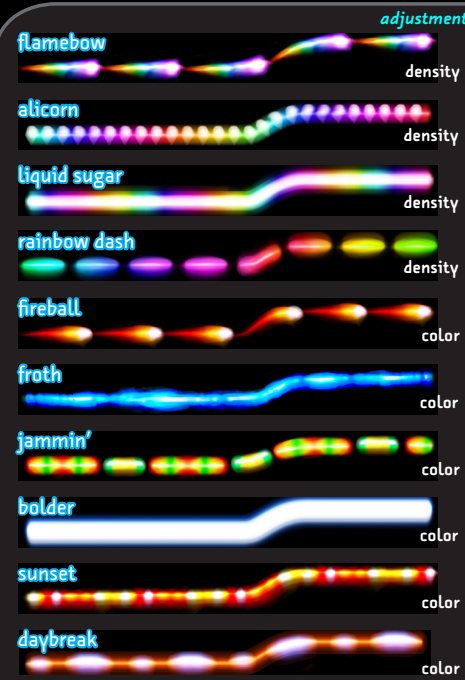

### page 4 :: favorites :: click button 4x

- 4 quick clicks takes you to "favorites". Here you'll find your most recently saved patterns.
- Press the button to cycle through them.
- You can adjust your saved patterns.
- Saving a pattern in favorites moves it to p4m1. Use this to rearrange your favorite modes.

### page 5 :: settings

- 5 quick clicks takes you to "settings".
- Each "mode" is a setting that can be adjusted.
- Settings affect the overall behaviour of the light and in most cases apply to all modes.

**mode1:** global brightness  
**mode2:** global white balance  
**mode3:** reset to factory default  
**mode4:** autoplay adjust shuffle

### How to adjust a setting:

- Most settings have 5 levels to choose from.
- Setting levels are indicated by blinks, similar to page number blinks.
- When adjusting a setting, the light will blink 1-5 times to indicate what level it is on. Press to select.

pages 1-4 mode 11 is **autoplay** :: cycle through all 10 modes on the page, and adjust the timing between modes!