

grouping

Connect 2 or more capsules

If capsule A and B are not grouped and you'd like to group them:

- Put capsule "A" into p5m1, **long press** to adjust, choose desired group color and **press** to select.
- Put capsule "B" into p5m1 and adjust.
- Select the same group color as "A" to connect A & B.
- You must adjust capsule "B" to connect.
- Save the grouping, or it will be temporary and revert to previous grouping after turning off.
- Multiple separate groups of the same color can exist.

If capsule A is joining capsule B's group:

- Similar to above, except do NOT adjust capsule B. If you adjust, you will create a new group.

Group "white" is the "global" group and does not require connecting. All capsules in "white" group will always be in the same group - an easy way to join your friends, or coordinate an instant flash mob.

power

Check your battery charge level: From off, hold button. The light will blink its charge level color:
Red: low || Orange: ok || Yellow: good || Green: great

Low battery mode: When the battery gets low, the light will exhibit a dim red flicker for awhile, so your light doesn't go totally dark immediately.

Welcome to capsule 2.0

and the start of a whole new paradigm in LED props with flowtoys connect technology.

Keep this pocket guide handy to help you navigate the amazing new features in your capsule 2.0.

Thanks to USB firmware update-ability, we will be continuing to improve capsule 2.0 programming and features.

Check for firmware updates, how-to-videos & a complete guide to what your capsules can do at:
flowtoys.com/product-support

flowtoys
connect



capsule 2.0

40+ modes :: all adjustable
hella bright custom high-temp LEDs
kinetic awareness & motion response
connect, sync & control wirelessly
usb rechargeable & programmable

Navigation	from Off	from anywhere in p1 - p5	in "adjust"
Press	turns on to most recent mode	next mode	select adjustment
Click 2x	p2ml	p2ml	p2ml
Click 3, 4 or 5x	p3ml, p4ml or p5ml	p3ml, p4ml or p5ml	p3ml, p4ml or p5ml
Click 6x	p1ml	p1ml	p1ml
Long press	battery charge level	enter adjust	select
Hold	battery charge level	turn off	select & turn off
Long hold	solo on if grouped	solo off if grouped	select & solo off
Hold to save	charge level	save mode or setting	select & save

For more tips & video how-tos, check out flowtoys.com/support or youtube.com/flowtoys

page 1 :: play :: press or click button 1x



page 2 :: party :: click button 2x



page 3 :: perform :: click button 3x



page 4 :: favorites

- 4 quick clicks takes you to "favorites". Here you'll find your most recently saved patterns. You can save up to 60 modes!
- Press the button to cycle through them.
- To delete a favorite, hold past save until you see 5x red flashes, then let go.
- You can create looks and scenes by saving adjustments within favorites to individual capsules.

page 5 :: settings

- Each "mode" is a setting that can be adjusted.
- Settings affect the overall behaviour of the light and in most cases apply to all modes.

mode1: grouping
mode2: global brightness
mode3: global white balance
mode4: reset to factory default
mode5: autoplay adjust shuffle

How to adjust a setting:

- Most settings have 5 levels to choose from.
- Setting levels are indicated by blinks, similar to page number blinks.
- When adjusting a setting, the light will blink 1-5 times to indicate what level it is on. Press to select.

pages 1-4 :: last mode is autoplay :: cycle through all the modes on that page, and adjust the timing between modes!