


## FLOWMOJA CONTACT POI

features  
operating instructions  
troubleshooting  
inspiration



*flowmoja contact poi = umoja spheres + modified capsule lights + FPC + knob*

Welcome to your flowmoja contact poi with the all new FPC rope! You can find detailed instructions and tips for how to use your capsule lights in an accompanying manual. This guide provides instructions for adjusting the length of your FPC and how to expose the capsule light in your flowmoja rigs for charging. Video instructions are available on [flowtoys.com/product-support](http://flowtoys.com/product-support).

**Adjusting your leash:** Adjusting your leash length is an easy and important step to optimizing your poi. A popular length is from your hand to your shoulder.

To adjust the length of FPC, you will need:

- tape: Ideally masking tape, but most tape will work. Avoid super-sticky tape like gorilla or duct tape if you can, as it may tear the fibers or leave a sticky residue.
- a very sharp knife or box-cutter. A freshly sharpened kitchen knife works great.
- a lighter: A torch lighter is ideal, but any source of flame will do, even a candle!
- a marker or pen: To mark where you cut your leash.

You are going to melt about 3mm (1/8") off the end of the rope to form a puck of hard plastic to retain your knob washers or capsule light. The melted puck that comes on the capsule-end of your leash is formed with a special mold for an extra strong connection. We recommend not modifying this end if you can avoid it, but if you must, just make the best puck you can and it should hold fine.

*Note: FPC (like VPC) will shrink up to 4cm (1.5"), usually in the first few months, due to internal fibers shifting. So start a little longer than you'd actually like. You can cut it down later if necessary.*

### Step 1: tape #1

Using a marker or pen, mark where you want your leash to end, and wrap some tape tightly around the rope at the edge of the line. You should still be able to see your marked line. The tape should be on the part of the rope you want to keep (poi head side).

### Step 2: tape #2

Wrap another piece of tape around the rope about 3mm (1/8") from the line/the other tape. You should have about 3mm (1/8") of exposed rope between the 2 pieces of tape.



### Step 3: cut

Use a sharp knife to cut the rope at the edge of the tape you added in step 2, on the side of the line you do NOT want to keep.

Do not use a lot of pressure or you can deform the rope and tape. Use a sawing motion to make a nice clean cut. A long sharp kitchen knife is great for this step.

### Step 4: melt - WORK IN A WELL VENTILATED AREA!

- Make sure any knobs, washers etc. you want on your rope are in place, as this is your last chance!
- Tape#1 should still be in place to hold the rope tightly together as you melt the end.
- Hold the end of the rope at the edge of a flame, but not in the flame. You want to slowly melt it into a nice mushroom/puck of hard plastic. Avoid burning the rope, as this makes it brittle.



### Step 5: finish!

Remove the tape, pull your parts into place, and go feel the flow of your new rigs!

### CHARGING YOUR LIGHTS



Release the capsule from the umoja sphere by using your thumbs to push the top (leash end) of the capsule out through the bottom of the sphere. You do NOT have to take out the whole light, just enough to expose the USB jack. When your capsules are charged, slide them back through the sphere, and use the leash to pull the capsule light back into the sphere.



**Note:** Unlike podpoi, there is NO c-ring on the capsule, and the o-ring in flowmojas is on the button side, not the leash side.

## FOREVER FLOW LIFETIME WARRANTY

Flowtoys are designed to last you a lifetime, but nothing is indestructible, so we provide this warranty to enable you to freely find your flow\*.

If you manage to break a flowtoys product, we offer free replacements on defective or non-working parts due to intended use, and 50% credit for products in any condition at any time. Battery depletion is normal wear & tear and covered for free in first 2 years and half-price/capsule after.


If you need warranty support, please contact us at [support@flowtoys.com](mailto:support@flowtoys.com).

*\* Please check flowtoys.com for full warranty details.*

*Flowtoys reserves the right to refuse coverage to anyone abusing this warranty. Please contact us before sending in your product, or it may be returned to sender.*




flowtoys

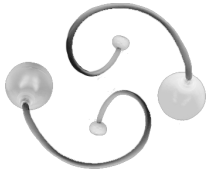

## FLOWMOJA CONTACT POI

features  
operating instructions  
troubleshooting  
inspiration



*flowmoja contact poi = umoja spheres + modified capsule lights + FPC + knob*

Welcome to your flowmoja contact poi with the all new FPC rope! You can find detailed instructions and tips for how to use your capsule lights in an accompanying manual. This guide provides instructions for adjusting the length of your FPC and how to expose the capsule light in your flowmoja rigs for charging. Video instructions are available on [flowtoys.com/product-support](https://flowtoys.com/product-support).

**Adjusting your leash:** Adjusting your leash length is an easy and important step to optimizing your poi. A popular length is from your hand to your shoulder.

To adjust the length of FPC, you will need:

- tape: ideally masking tape, but most tape will work. Avoid super-sticky tape like gorilla or duct tape if you can, as it may tear the fibers or leave a sticky residue.
- a very sharp knife or box-cutter. A freshly sharpened kitchen knife works great.
- a lighter: A torch lighter is ideal, but any source of flame will do, even a candle!
- a marker or pen: To mark where you cut your leash.

You are going to melt about 3mm (1/8") off the end of the rope to form a puck of hard plastic to retain your knob washers or capsule light. The melted puck that comes on the capsule-end of your leash is formed with a special mold for an extra strong connection. We recommend not modifying this end if you can avoid it, but if you must, just make the best puck you can and it should hold fine.

*Note: FPC (like VPC) will shrink up to 4cm (1.5"), usually in the first few months, due to internal fibers shifting. So start a little longer than you'd actually like. You can cut it down later if necessary.*

### Step 1: tape #1

Using a marker or pen, mark where you want your leash to end, and wrap some tape tightly around the rope at the edge of the line. You should still be able to see your marked line. The tape should be on the part of the rope you want to keep (poi head side).

### Step 2: tape #2

Wrap another piece of tape around the rope about 3mm (1/8") from the line/the other tape. You should have about 3mm (1/8") of exposed rope between the 2 pieces of tape.



### CHARGING YOUR LIGHTS

Release the capsule from the umoja sphere by using your thumbs to push the top (leash end) of the capsule out through the bottom of the sphere. You do NOT have to take out the whole light, just enough to expose the USB jack. When your capsules are charged, slide them back through the sphere, and use the leash to pull the capsule light back into the sphere.



**Note:** Unlike podpoi, there is NO c-ring on the capsule, and the o-ring in flowmojas is on the button side, not the leash side.


## FOREVER FLOW LIFETIME WARRANTY

Flowtoys are designed to last you a lifetime, but nothing is indestructible, so we provide this warranty to enable you to freely find your flow\*. If you manage to break a flowtoys product, we offer free replacements on defective or non-working parts due to intended use, and 50% credit for products in any condition at any time. Battery depletion is normal wear & tear and covered for free in first 2 years and half-price/capsule after. If you need warranty support, please contact us at [support@flowtoys.com](mailto:support@flowtoys.com).

\* Please check [flowtoys.com](https://flowtoys.com) for full warranty details. Flowtoys reserves the right to refuse coverage to anyone abusing this warranty. Please contact us before sending in your product, or it may be returned to sender.

### Step 3: cut

Use a sharp knife to cut the rope at the edge of the tape you added in step 2, on the side of the line you do NOT want to keep.

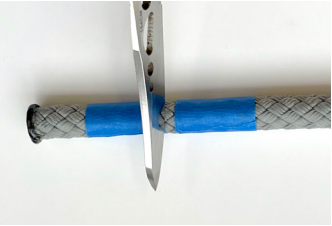

### Step 4: melt - WORK IN A WELL VENTILATED AREA!

- Make sure any knobs, washers etc. you want on your rope are in place, as this is your last chance!
- Tape #1 should still be in place to hold the rope tightly together as you melt the end.
- Hold the end of the rope at the edge of a flame, but not in the flame. You want to slowly melt it into a nice mushroom/puck of hard plastic. Avoid burning the rope, as this makes it brittle.



Do not use a lot of pressure or you can deform the rope and tape. Use a sawing motion to make a nice clean cut. A long sharp kitchen knife is great for this step.

**Step 5: finish!**  
Remove the tape, pull your parts into place, and go feel the flow of your new rigs!

